

40 BELOW ULTRA STICKY, PLATINUM, FLEX AND HYDRO INSTALLATION INSTRUCTIONS




MASONS
Designed Smart, Built Tough.

V2.0 October 2025

Window Sill Installation


CodeMark 
CMNZ70075

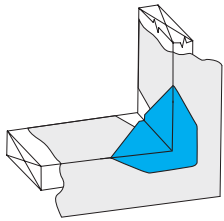

1. CORNER GUARD OPTION 1


Place the Masons Corner Guard over the building wrap and into the bottom corners of the window or door sill, and staple to the jamb. With steel frames use double-sided tape to attach the Corner Guard to the metal.

The use of Masons Corner Guards (Hydro Corners) is strongly recommended for UNI PLUS jobs and mandatory for UNI PRO installations.

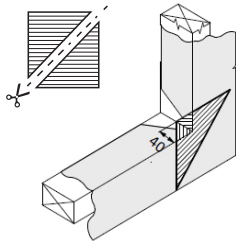

1. CORNER GUARD OPTION 2

Cut a 150mm square of Masons flashing tape into two equal triangular pieces. Install these at the bottom corners of the frame opening. The triangle needs to reach 40mm in from the extreme end of the window sill, with the remainder overlapping the building paper.

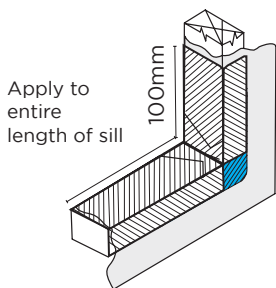


2. SILL GUARD

A. Install sill tape flush with the interior face of the opening. Apply along entire length of sill, continue up each jamb for a minimum of 100mm.

B. IMPORTANT: Press tape firmly into the corner over the Corner Guard first, then fold around onto the frame face. Always use a plastic tape scraper to press Masons tapes firmly onto surfaces to achieve the correct adhesion.


C. Fold remainder of the flashing tape against outer face of the frame/building. Smooth out all creases and press firmly for good adhesion.

Window Head Installation

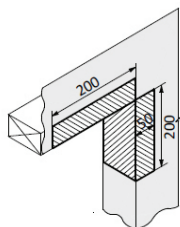

1. LINTEL PIECE

Install lintel pieces on top corners of opening. 200mm along the lintel and 200mm down the jamb. Slit at each corner and fold onto outer face of the building wrap (at least 50mm).

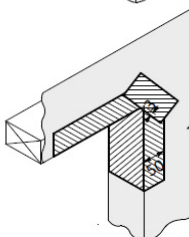

2. BUTTERFLIES


To create a seal at the corner junction, install butterflies at 45° across the corner of the head/jamb.



Window Head Flashing Installation

Apply Masons flashing tape to the top of the window head flashing, up-stand and building wrap. Refer to the window and cladding details for specific application.

- To ensure maximum adhesion of the tape, make sure the substrate surface is clean, dry and free from any dust or other contaminants.
- Always use a plastic tape scraper to press Masons tapes firmly onto surfaces to achieve the correct adhesion.

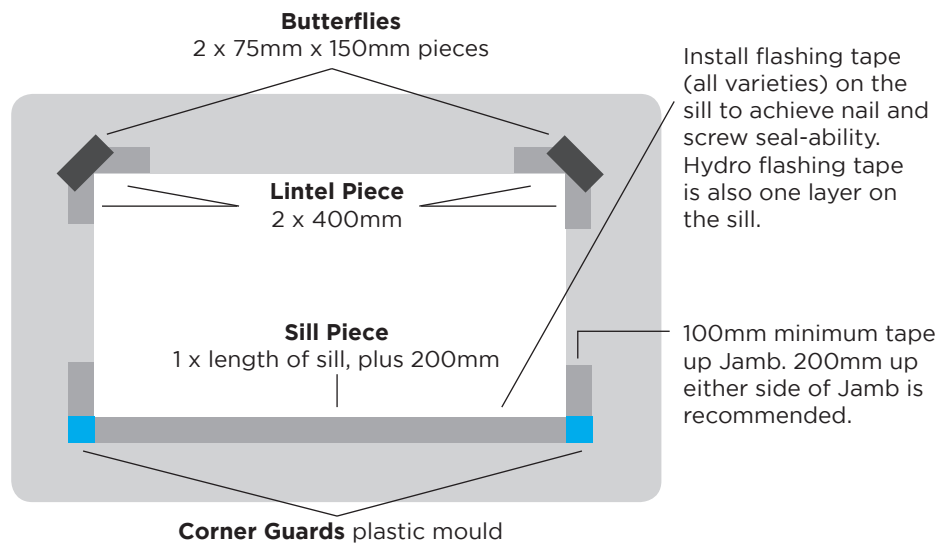

- See Masons website for more information: mpb.co.nz